


## Basic i-Guide Navigation Tips

- \* Yellow is always the highlight color. As you navigate listings using your remote, the highlight appears on screen to indicate your current selection.
- \* Press the ▲▼◀▶ buttons on your remote to move the highlight.
- \* Press **OK** to make your selection.
- \* Press the **EXIT** button on your remote to return to watching TV.

## Remote Control Features

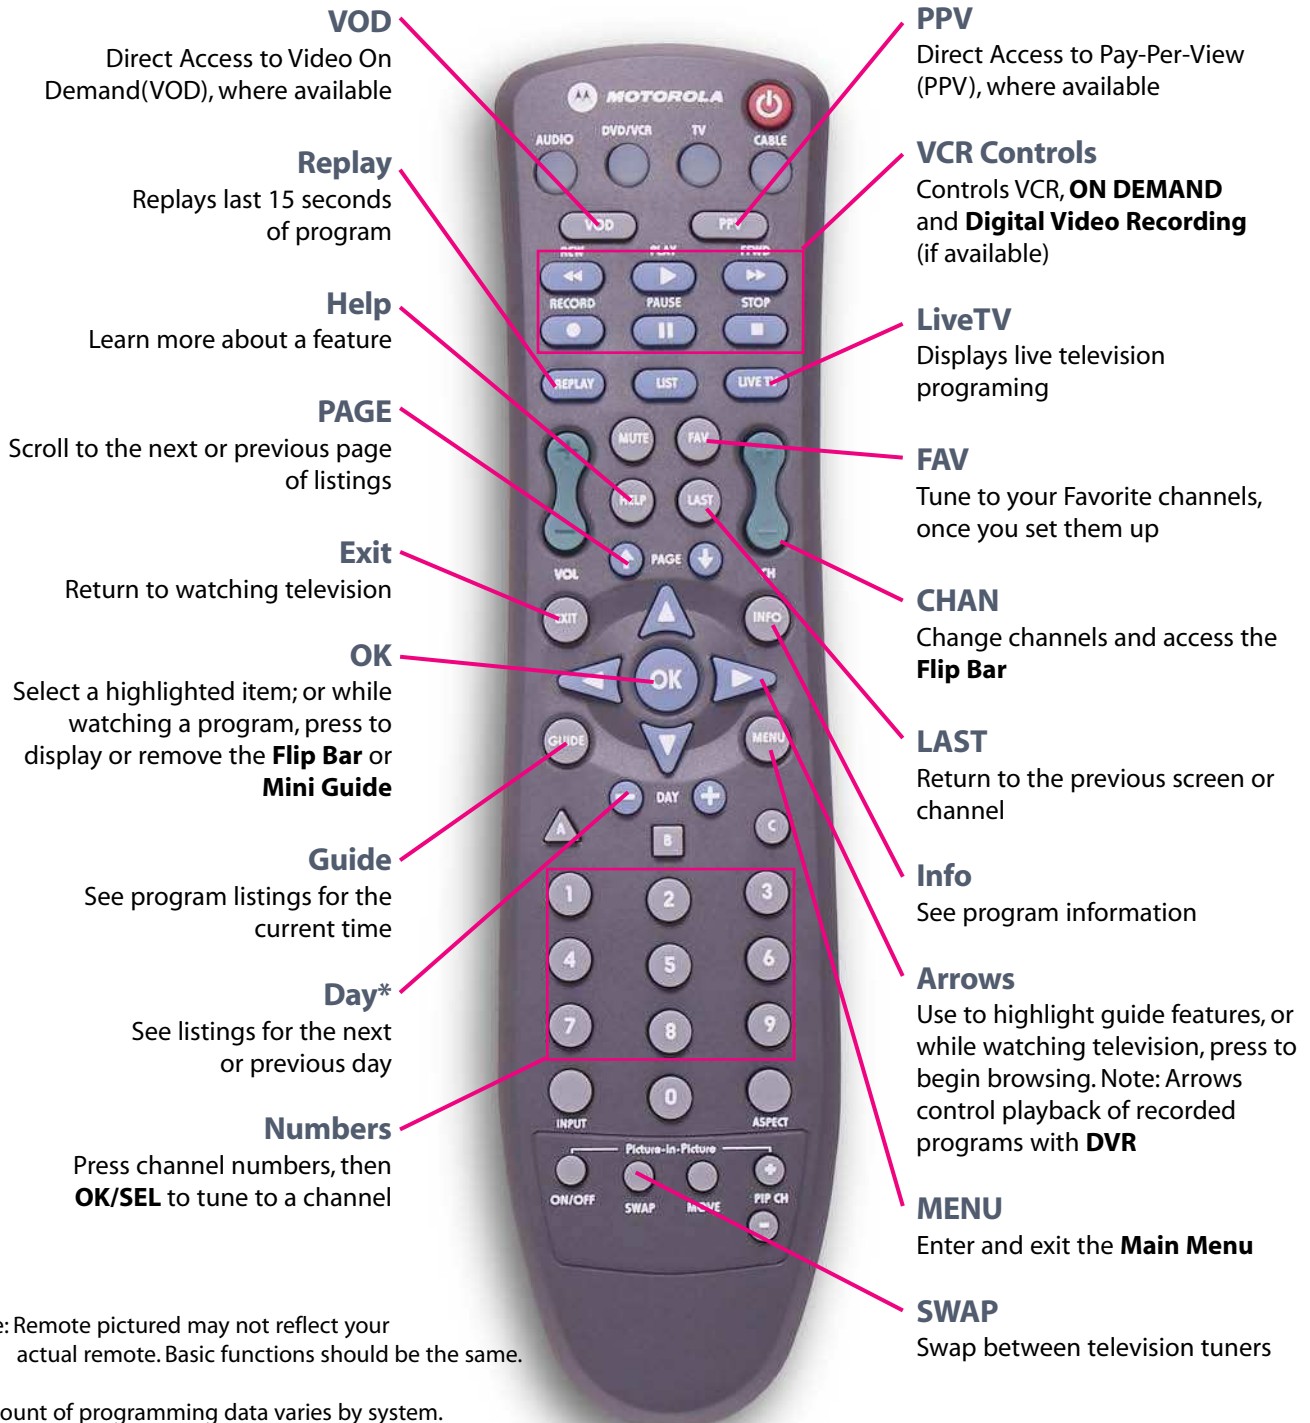

Note: Remote pictured may not reflect your actual remote. Basic functions should be the same.

\*Amount of programming data varies by system.